# ATN OTS-XLT

## HANDHELD THERMAL MONOCULAR



# MANUAL



## REGULATORY INFORMATION

#### **FCC Information**

FCC compliance: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### **FCC Conditions**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference.
- 2. This device must accept any interference received, including interference that may cause undesired operation.

### **EU Conformity Statement**



This product and - if applicable - the supplied accessories too are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info



2006/66/EC (battery directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg).

For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info

## **CAUTION!**

THIS PRODUCT CONTAINS NATURAL RUBBER LATEX, WHICH MAY CAUSE ALLERGIC REACTIONS

The information in this manual is furnished for informational use only, is subject to change without notice, is not to be construed as a commitment by ATN Europe LTD.

ATN Europe LTD assumes no responsibility or liability for any errors or inaccuracies that may appear in this book.

©2021 ATN Europe LTD. All right reserved.

## TABLE OF CONTENTS

1. SAFETY INSTRUCTION	4
2. SPECIFICATIONS	5
3. OVERVIEW	5
3.1. Brief Description	5
3.2. Function	5
3.3. Appearance	6
3.3.1. Button	
3.3.2. Interface	7
4. PREPARATION	7
4.1. Charge Device	
4.2. Power On/Off	
4.3. Menu Description	8
5. IMAGE SETTINGS	9
5.1. Adjust Diopter	
5.2. Focus Lens	
5.3. Adjust Brightness	
5.4. Adjust Contrast	
5.5. Select Scene	
5.6. Set Palettes	
5.7. Adjust Digital Zoom	
5.8. Flat Field Correction / Non Uniform Correction	
5.9. Correct Defective Pixel	
6. MEASURE THE DISTANCE	
7. HIGHEST TEMPERATURE TRACKING	
8. PICTURE AND VIDEO	.15
8.1. Capture Picture	
8.2. Record Video	
8.3. OSD	
8.4. Export Files	
9. CVBS OUTPUT	.16
10. MAINTENANCE	.16
10.1. View Device Information	
10.2. Restore Device	.17
11. FREQUENTLY ASKED QUESTIONS	.17
11.1. Why does the charge indicator flash improperly?	. 17
11.2. The image is not clear, how to adjust it?	
11.3. Capturing or recording fails. What's the problem? .	
11.4. Why the PC cannot identify the device?	
12. WARNINGS AND CAUTIONS	.18
13.2 YEAR PRODUCT WARRANTY	.18

 $\mathbf{2}$ 

## 1. SAFETY INSTRUCTION

These instructions are intended to ensure that the user can use the product correctly to avoid danger or property loss.

#### **Transportation**

- Keep the device in original or similar packaging while transporting it.
- Keep all wrappers after unpacking them for future use. In case of any failure, you
  need to return the device to the factory with the original packaging. Transportation
  without the original packaging may result in damage to the device.
- Do not drop the product or subject it to physical shock. Keep the device away from magnetic interference.

### **Power Supply**

- You will need to obtain a compatible charging block. Input voltage should meet the Limited Power Source (5 V DC, 2 A) according to the IEC61010-1 standard.
- Make sure the plug is properly connected to the power socket.
- DO NOT connect multiple devices to one power adapter, to avoid over-heating or fire hazards caused by overload.

#### **Battery**

- The built-in battery cannot be removed. Please contact the manufacture for repair if necessary.
- For long-term storage of the battery, make sure it is fully charged every half year to ensure the battery quality. Otherwise, damage may occur.

#### Maintenance

- If the product does not work properly, please contact your dealer or the nearest service center. We shall not assume any responsibility for problems caused by unauthorized repair or maintenance.
- Wipe the device gently with a clean cloth and a small quantity of ethanol, if necessary.
- If the equipment is used in a manner not specified by the manufacturer, the protection provided by the device may be impaired.

## **Operational Environment**

- Make sure the operating environment meets the requirement of the device. The
  operating temperature shall be -20°C to 55°C (-4°F to 131°F), and the operating
  humidity shall be 95% or less.
- DO NOT expose the device to high electromagnetic radiation or dusty environments.
- . DO NOT aim the lens at the sun or any other bright light.

#### **Emergency**

 If smoke, odor, or noise arises from the device, immediately turn off the power, unplug the power cable, and contact the service center.

## 2. SPECIFICATIONS

	OTS-XLT 160 2-8x	OTS-XLT 160 2.5-10x
Lens	19 mm	25 mm
Sensor	160x120 px / 17 μm 50 Hz	
Magnification	2 – 8×	2.5 – 10×
Field of view, degrees	8.2×6.2	6.5×4.9
Core	ATN Obsidian Core LT	
Micro Display	720×540 px	
IP rating	IP67	
Charging	USB, type C	
Video Record Resolution	720×576 px	
Internal Storage	8 Gb	
Color modes	White Hot / Black Hot / Red Hot / Color	
Battery life (Li-ion)	≈10 hr	
Operating Temperature	-4°F to +131°F / -20°C to 55°C	
Dimensions	6.85" × 2.63" × 2.08" / 174 × 67 × 53 mm	
Weight	0.81 lb/370 g	
Human Detection Range, m	670	850
Human Recognition Range, m	335	425
Human Identification Range, m	170	210
Warranty	2 years	

## 3. OVERVIEW

## 3.1. BRIEF DESCRIPTION

The handheld thermal monocular is a handheld device for observation, highest temperature target tracking, distance measurement. The high-sensitivity built-in thermal detector provides you with clear view even in total darkness. The device is mainly applied to outdoor scenarios such as patrolling, law enforcement, search and rescue, drug enforcement, anti-smuggling, hiking, travel, and hunting, etc.

## 3.2. FUNCTION

#### **Distance Measurement**

The device can detect the distance between the target and the observation position.

## **Highest Temperature Tracking**

The device can detect the highest temperature in the scene and mark the spot. This function varies according to different camera models.

#### **Image Correction**


The device supports DPC (Defective Pixel Correction) and FFC/NUC (Flat Field Correction)/(Non Uniform Correction) which can optimize the image quality.

#### Storage

The built-in memory module supports video recording and snapshot capturing.

## 3.3. APPEARANCE

#### 3.3.1. Button

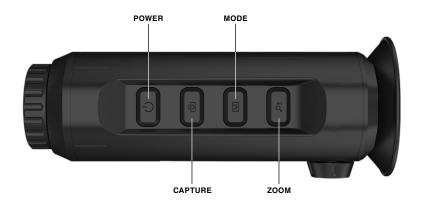

**Buttons on the Device** 

#### **Button Functions**

Icon	Button	Function
U	Power	Press: standby mode/wake up device Hold: power on/off
	Capture	Press: capture image Hold: recording video
M	Mode	Press: color palettes Hold: menu
Q±	Zoom	Press: digital zoom Hold: FFC/NUC

#### 3.3.2. Interface



**Overview of Interfaces** 

- Diopter Adjustment Knob: adjust the view of the display for your vision.
- Cable Interface: charge the device or export files with the supplied cable.
- Tripod Screw: connect to tripod.

# 4. PREPARATION

Take out the device and accessories. Check them with the packaging list to confirm device and accessories are included and available for use. Read the user manual to learn the usage methods and cautions.

## 4.1. CHARGE DEVICE

After the device starts up, the OSD (on-screen display) shows the battery status. When the battery is low, charge the device and ensure it works properly.

#### **Before You Start**

- The charging temperature should be from 0°C to 45°C (32°F to 113°F).
- Charge the device with the delivered cable.

## **Steps**

- 1. Lift the cable interface cover.
- 2. Plug in the cable and charge the device.



#### **Cable Interface**

- Flashing Red & Green: error occurred.
- Solid Red: battery is properly charging.
- Solid Green: battery is fully charged.
- Off: battery is not charged.

## 4.2. POWER ON/OFF

#### **Power On**

When the battery is fully charged, press for 2 seconds to power on the device.

#### **Power Off**

When the device is turned on, hold of for 2 seconds to power off the device.

## 4.3. MENU DESCRIPTION

When the device powers on, hold to display the menu.

Press to move the cursor up.

Press ₽ to move the cursor down.

Press to confirm and hold it to exit the menu.

# 5. IMAGE SETTINGS

You can set palettes, brightness, scenes, FFC/NUC (flat field correction)/ (non-uniform correction), and DPC (defective pixel correction) to display the best image.

## **5.1. ADJUST DIOPTER**

Make sure the eyepiece covers your eye and aim at the target. Adjust the diopter adjustment knob until the OSD text or image is clear.

#### NOTE

When adjusting diopter, DO NOT touch the surface of lens to avoid smearing the lens.



**View the Target** 



**Adjust Diopter** 

## 5.2. FOCUS LENS

Slightly rotate the focus wheel to focus the objective lens.



**Adjust Objective Lens** 

#### NOTE

- DO NOT touch the lens directly with your finger, or place any sharp objects near it.
- This function varies according to different camera models.

## **5.3. ADJUST BRIGHTNESS**

Hold M, select and press M to adjust brightness. In white hot mode, the higher the value of brightness is, the brighter the image is. The image effect in white hot mode is showed as picture below and effect in black hot mode is opposite.



**Adjust Brightness in White Hot Mode** 

## **5.4. ADJUST CONTRAST**

Hold M, select and press to adjust image contrast.

## **5.5. SELECT SCENE**

Depending on the environment which you operate you can select the appropriate scene: ie Forest, etc.

### Steps

- 1. Hold to go to the menu.
- 2. Select and press to switch scene.
- refers to recognition mode and is recommended in normal scene.
- A refers to Forest mode and is recommended in hunting environment.
- 3. Hold to save settings and exit.

## **5.6. SET PALETTES**

You can select different palettes to display the same scene in different effects. Press to switch palettes.

#### White Hot

The hot part is light-colored in view. The higher the temperature is, the lighter the color is.



#### **Black Hot**

The hot part is black-colored in view. The higher the temperature is, the darker the color is.



#### **Red Hot**

The hot part is red-colored in view. The higher the temperature is, the redder the color is.



#### **Fusion**

From high temperature to low temperature, the image is colored in from white, yellow, red, pink to purple.



## 5.7. ADJUST DIGITAL ZOOM

You can zoom the image by using this function.

Press  $\mathbb{P}^{\pm}$  in the view mode, the live view switches between 1×, 2×, and 4×.

#### NOTE

This function varies according to different camera models.

# 5.8. FLAT FIELD CORRECTION / NON UNIFORM CORRECTION

This function can correct non-uniformity of display.

#### **Steps**

1. Hold to go to the menu.

- 2. Select and press to switch FFC/NUC mode.
- Manual: Hold 🔎 🖆 in live view to correct the non-uniformity of display.
- Auto: The device performs FFC/NUC automatically according to the set schedule when switching on the camera.
- 3. Hold to save the settings and exit.

## 5.9. CORRECT DEFECTIVE PIXEL

The device can correct the defective pixels on the screen which are not performing as expected.

### **Steps**

- 1. Hold to show the menu.
- 2. Select
- 3. Press to select the offset. The offset refers to the moving length of cursor.
- 4. Press or to select the moving direction.
- 5. Press to move the cursor to the position of dead pixel. Hold to correct the dead pixel.

#### NOTE

If the menu blocks the dead pixel, hold  $\bigcirc^{\pm}$  to perform mirror display.

## 6. MEASURE THE DISTANCE

The device can detect the distance between the target and the observation position.

#### **Before You Start**

When measuring the distance, keep the hand and the position steady. Otherwise, the accuracy may be affected.

## Steps

- 1. Hold M to show the menu.
- 2. Select and press to go to the setting interface.
  - a. Press or or to select the target from **Deer**, **Wolf**, **Bear**, and **Custom**.
  - b. Set the target height.

#### NOTE

The available height ranges from 0.1 m to 9.9 m.

c. Press M to confirm.



Set the Top Edge of the Target

The cursor blinks on the top edge of the target.

4. Align the center of bottom mark with the edge of target bottom. Press



Set the Edge of Target Bottom

#### Result

The left top of the image displays the distance measurement result and the height of the target.



Measurement Result

#### **NOTE**

Go to distance measurement interface, and press to view the result of the previous measuring target.

The device can detect the highest temperature spot in the scene and mark it on display.

In the menu, select and press lo mark the spot of highest temperature.

When the function is enabled, displays in the spot of highest temperature. When the scene changes, the moves.

#### **NOTE**

This function varies according to different camera models.

# 8. PICTURE AND VIDEO

You can manually record video or capture picture when displaying live view.

## **8.1. CAPTURE PICTURE**

On the main live view screen, press to capture picture.

#### **NOTE**

When image capture is successful, the image freezes for 1 second and a prompt shows on the display.

For exporting captured pictures, refer to 8.4. Export Files.

## 8.2. RECORD VIDEO

## Steps

1. In the main live view, hold to start recording.



**Start Recording** 

The left top of image displays the information of recording time.

2. Hold again to stop recording.

#### What to do next

For exporting recorded files, refer to 8.4. Export Files.

## 8.3. OSD

- 1. Hold to display the menu.
- 2. Select and press to switch OSD mode.

When OSD (On-Screen Display) mode is enabled, the information of battery status, storage status, and digital zoom display in top right corner of viewfinder.

## 8.4. EXPORT FILES

This function is used to export recorded videos and captured pictures.

#### Steps

1. Connect the device and PC with cable.

#### NOTE

Make sure the device is turned on when connecting the cable.

- Open computer disk and select the disk of device. Go to DICM → 100EZVIZ.
- 3. Select and copy the files to PC.
- 4. Disconnect the device from your PC.

#### **NOTE**

- The device displays images when you connect it to PC. But functions such as recording, capturing are disabled.
- When you connect the device to PC for the first time, it installs the drive program automatically.

# 9. CVBS OUTPUT

You can view the image on the display unit for details with this function.

#### **Before You Start**

Purchase the CVBS cable from the manufacturer separately or prepare it by yourself.

Connect the device and the display unit via USB to CVBS cable.

Turn on the device so that it can be detected by the display when activated.

## **Steps**

- 1. Hold to show the menu of device.
- 2. Select , and press to turn on output.

The display unit shows the device image.

## **10. MAINTENANCE**

This section provides information on checking the device information and restoring to defaults.

## 10.1. VIEW DEVICE INFORMATION

## Steps

16

1. Hold to show the menu of device.

2. Select ①, and press M. You can view the device information such as version, and serial No.

## 10.2. RESTORE DEVICE

#### **Steps**

- 1. Hold M to show the menu of device.
- 2. Select , and press to restore the device to defaults according to the prompt.

# 11. FREQUENTLY ASKED QUESTIONS

# 11.1. WHY DOES THE CHARGE INDICATOR FLASH IMPROPERLY?

Check the following items.

- 1. Check whether the device is charged with standard power adapter and the charging temperature is above 0°C (32°F).
- 2. The device is equipped with built-in charging protection module. Charge the device in power off status.

# 11.2. THE IMAGE IS NOT CLEAR, HOW TO ADJUST IT?

Adjust the diopter adjustment knob until the image is clear. And or adjust the Front Focus to clear up the image. Refer to section Adjust Diopter or Focus Lens.

# 11.3. CAPTURING OR RECORDING FAILS. WHAT'S THE PROBLEM?

Check the following items.

- Whether the device is connected to your PC. Capturing or recording is disabled in this status.
- Whether the storage space is full.
- · Whether the device has low-battery.

# 11.4. WHY THE PC CANNOT IDENTIFY THE DEVICE?

Check the following items.

- Whether the device is connected to your PC with supplied USB cable.
- If you use other USB cables, make sure the cable length is no longer than 1 m.

# 12. WARNINGS AND CAUTIONS

- Always remember to turn off the device when it is not in use.
- Do not disassemble, drop, open, crush, bend, deform, puncture, shred, microwave, incinerate, paint or insert foreign objects: it will void your warranty.
- Keep the monocular in the provided protective cover when not in use.
- · Avoid contact with dust, steam, and gas.
- This product contains natural rubber latex which may cause allergic reactions.
- The monocular is a precision electro-optical instrument and must be handled carefully.
- Do not scratch the external lens surfaces or touch them with your fingers.

#### **CAUTION**

Failure to follow these safety instructions could result in damage to the device!

# 13. 2 YEAR PRODUCT WARRANTY

This product is guaranteed to be free from manufacturing defects in material and workmanship under normal use for a period of 2 (two) years from the date of purchase. In the event a defect that is covered by the foregoing warranty occurs during the applicable period stated above, ATN Europe LTD, at its option, will either repair or replace the product, and such action on the part of ATN Europe LTD shall be the full extent of ATN Europe LTD's liability, and the Customer's sole and exclusive remedy. This warranty does not cover a product (a) used in other than its normal and customary manner; (b) subjected to misuse; (c) subjected to alterations, modifications or repairs by the Customer or by any party other than ATN Europe LTD without prior written consent of ATN Europe LTD; (d) special order or "close-out" merchandise or merchandise sold "as-is" by either ATN Europe LTD or the ATN Europe LTD dealer; or (e) merchandise that has been discontinued by the manufacturer and either parts or replacement units are not available due to reasons beyond the control of ATN Europe LTD. ATN Europe LTD shall not be responsible for any defects or damage that in ATN Europe LTD's opinion is a result from the mishandling, abuse, misuse, improper storage or improper operation, including use in conjunction with equipment which is electrically or mechanically incompatible with or of inferior quality to the product, as well as failure to maintain the environmental conditions specified by the manufacturer. This warranty is extended only to the original purchaser. Any breach of this warranty shall be waived unless the customer notifies ATN Europe LTD at the address noted below within the applicable warranty period. The customer understands and agrees that except for the foregoing warranty, no other warranties written or oral, statutory, expressed or implied, including any implied warranty of merchantability or fitness for a particular purpose, shall apply to the product. All such implied warranties are hereby and expressly disclaimed.

#### LIMITATION OF LIABILITY

ATN Europe LTD will not be liable for any claims, actions, suits, proceedings. costs, expenses, damages or liabilities arising out of the use of this product. Operation and use of the product are the sole responsibility of the Customer. ATN Europe LTD's sole undertaking is limited to providing the products and services outlined herein in accordance with the terms and conditions of this Agreement. The provision of products sold and services performed by ATN Europe LTD to the Customer shall not be interpreted, construed, or regarded, either expressly or implied, as being for the benefit of or creating any obligation toward any third party of legal entity outside ATN Europe LTD and the Customer; ATN Europe LTD's obligations under this Agreement extend solely to the Customer. ATN Europe LTD's liability hereunder for damages, regardless of the form or action, shall not exceed the fees or other charges paid to ATN Europe LTD by the customer or customer's dealer. ATN Europe LTD shall not, in any event, be liable for special, indirect, incidental, or consequential damages, including, but not limited to, lost income, lost revenue, or lost profit, whether such damages were foreseeable or not at the time of purchase, and whether or not such damages arise out of a breach of warranty, a breach of agreement, negligence, strict liability or any other theory of liability.

#### PRODUCT WARRANTY REGISTRATION

In order to validate the warranty on your product, ATN Europe LTD must receive a completed Product Warranty Registration Card for each unit or complete warranty registration on our website at www.atneu.com. Please complete the included form and immediately mail it to our Service Center: ATN Europe LTD, Bulevard Tsarigradsko shosse 7-11 km. Parking lot of METRO 1 store, Sofia Bulgaria 1784.

#### **OBTAINING WARRANTY SERVICE**

To obtain warranty service on your unit, End-user must notify ATN Europe LTD service department by calling +359 884974545 or via e-mail support@atneu.com to receive a Return Merchandise Authorization number (RMA).

Merchandise Authorization number (RMA).

When returning please take or send the product, postage paid, with a copy of your sales receipt to our service center, ATN Europe LTD at the address noted above. All merchandise must be fully insured with the correct postage; ATN Europe LTD will not be responsible for improper postage or, missing or damaged merchandise during shipment.

When sending product back, please clearly mark the RMA# on the outside of the shipping box. Please include a letter that indicates your RMA#, Name, Return Address, reason for service return, Contact information such as valid telephone numbers and/or e-mail address and proof of purchases that will help us to establish the valid start date of the warranty. Product merchandise returns that do not have an RMA listed may be refused or a significant delay in processing may occur.

Estimated Warranty service time is 10-20 business days. End-user/customer is responsible for postage to ATN Europe LTD for warranty service. ATN Europe LTD will cover return postage/shipping to European Union countries end-users/customers after warranty repair only if product is covered by aforementioned warranty. ATN Europe LTD will return product after warranty service by domestic TNT ground and/or domestic mail. Any other requested, required or international shipping method the postage/shipping fee will be the responsibility of the end-user/customer.



For customer service and technical support, please contact

## **ATN Europe LTD**

Plovdiv, Vasil Levski str. 52 Bulgaria Tel. 00359 884 974545

support@atneu.com atneu.com